

	EDU2AE	EDU2AE/FR	EDU2AE/HPro	EDU2AE/TOP	EDU2AE/TOP/E	EDU2AE/TOP/TA
Switching power supply	x	x	x	x	x	x
Settable Torque percentage	x		x	x	x	x
Ramp and Speed settings	x	x	x	x	x	x
Speed 1 and Speed 2 settings	x		x	x	x	x
Min/max or infinite time settings	x	x	x	x	x	x
Auto reverse	x	x	x	x	x	x
Pre Reverse			x	x	x	x
Settable loosening speed	x		x	x	x	x
Settable loosening torque	x		x	x	x	x
Run time	x	x	x	x	x	x
Prevailing torque			x	x	x	x
Clockwise/anticlockwise tightening			x	x	x	x
Password		x	x	x	x	x
Calibration			x	x	x	x
Nm - lb/in - Kgf.cm selection			x	x	x	x
Min/max torque			x	x	x	x
Screw count and end cycle signal		x	x	x	x	x
Screw reset				x	x	x
Program reset		x	x	x	x	x
Sequence reset				x	x	x
Multitorque				x	x	x
Lever error				x	x	x
Enable/Disable loosening				x	x	x
Barcode				x	x	x
Serial print		x	x	x	x	x
Error,motor on and correct screw signals	x	x	x	x	x	x
Optional screwdriver connector on back panel		x	x			
Multilanguage	x	x	x	x	x	x
Use with DOCK04 double output connector				x	x	x
Use with PRNTR1 serial printer		x	x	x	x	x
Printing options for each program				x	x	x
Use with TLS1	x	x	x	x	x	x
>> w/automatic program switch				x	x	x
PC programming (EDU EXPAND software)					x	x
USB flash drive & port					x	x